

### 1 DESCRIPTION

The 8010 Jar Roller is used to rotate jars of adhesive paste to maintain uniformly mixed, bubble-free material while stored at room temperature. The speed of rotation (about 2 rpm) is high enough to maintain homogeneity of jar contents and low enough to prevent centrifuging and separation of contents.

### 2 KEY FEATURES AND SPECIFICATIONS

- Provides for consistent, optimized adhesive application and performance
- Eliminates or reduces manual mixing or deaeration
- Minimizes solvent evaporation caused by opening jar for manual mixing
- Contains six metal rollers which rotate at about 2 rpm
- Rollers are 28.0 cm long x 2.9 cm diameter (11" x 1.1"), spaced 1.0 cm (0.4") apart
- Holds up to 30 jars of ½ fluid ounce size
- Accommodates jars as large as 32 fluid oz. (1 quart) or 1 liter or greater
- Operates on 120 V, 60 Hz, 0.6 A, at approximately 60dB
- Approximate dimensions: 40.6 x 25.4 x 19.1 cm  
16" long x 10" wide x 7½" high
- Shipping weight approximately 8.6 kg (19 pounds)

### 3 ORDERING INFORMATION

#### Ordering Number

**Model 8010 Jar Roller**

Adhesive uniformity and homogeneity.

### 4 MORE INFORMATION

See the attached Operating and Maintenance Instructions and Service Parts List for additional details. For more information about the 8010 Jar Roller and any other Namics products contact:

**NAMICS Corporation, 3993 Nigorikawa, Kita-ku, Niigata City, 950-3131, Japan**  
Phone+81-25-258-5577 Fax+81-25-258-5511 [www.namics.co.jp](http://www.namics.co.jp)

# NAMICS Model 8010 JAR ROLLER

## OPERATING AND MAINTENANCE INSTRUCTIONS AND SERVICE PARTS LIST

### INTRODUCTION

1. Please read instructions before using.
2. Keep machine clean at all times.

### SAFETY INSTRUCTIONS

1. Use an appropriate electrical outlet capable of supplying 120 VAC, 60 Hz, 0.6 A.

### PREPARATION

1. Set unit on a level surface.
2. Position unit near a power outlet. Avoid the use of extension cords.
3. Clean unit as needed before use, using a dry, lint-free towel.

### OPERATION

1. Plug machine into power outlet and rollers will begin turning.
2. To stop rollers, unplug machine from the outlet.

### CLEANING

NOTE: Proper maintenance plays an important part in the life span and functioning of the unit.

1. Plug machine in and clean with a dry, lint-free towel.
2. Start at the end of rollers and wipe toward the center.

